

Vehicle GPS tracker Coban TK303



Short installation and operating instructions

Full version: <https://nyomkovetes.net>



The device is a satellite tracking device. Due to its compact design and excellent communication capabilities, it is a convenient and efficient device. Its operation, based on the GSM / GPRS network (mobile service providers), the Internet and the GPS satellite system, allows you to retrieve the current position and other data of the device using SMS or an Internet application.

It supports the use of an online map application that allows real-time map tracking and retrieval of more complex information. The device can be operated alone or connected to a vehicle power supply.

Distributor

FlexCom Communication Kft

2151 Fót, Szent Imre u. 94. HUNGARY

Phone: +36 1 769 1005

Email: info@nyomkovetes.net

Website: <https://nyomkovetes.net>

1. Parts of the device

GPS connection / Charge / GSM connection indicators



2. Installation

2.1 Preparing the SIM card


If you did not obtain your SIM card from your dealer, you must set it up before inserting / using it in your device: Insert the SIM card into your phone. In the phone settings, turn off the PIN code request option,

1. turn off the auto answer option, and call forwarding.
2. After turning off the above, insert the card into the tracking device.



Only standard size SIM cards can be used with this product. If you have another type of SIM, use a card adapter.

2.1 Inserting the SIM card

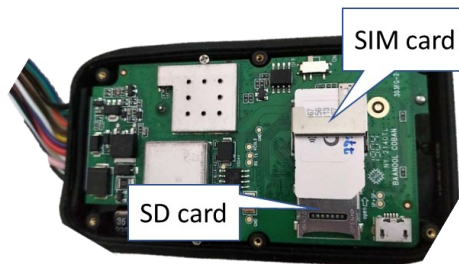

Steps:

1. Use a screwdriver to remove the back cover.
2. Insert SIM (and SD) cards. Make sure the cards are in the correct position.
3. Screw the back cover back on.

2.2 Data traffic setup


If you did not obtain your SIM card from your dealer, you need to connect it to the GSM network. This can be done with the following SMS messages sent to the card's phone number (123456 is the factory default password for the tracking device).

1. Turn on GPRS data traffic
SMS: gprs123456
2. Enter the APN name
SMS: apn123456 (space) APN name
3. Enter the APN username
SMS: apnuser123456 (space) APN username
4. Enter the APN password
SMS: apnpasswd123456 (space) APN password

If your mobile service provider has not provided an APN username and password, messages 3 and 4 do not need to be sent.

2.3 Installation and turning on

Carry out the installation as shown below:

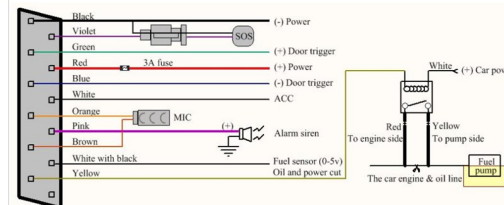

Comment

The pink wire can also be connected to the vehicle horn or to a separately purchased siren.

If you also use a door open sensor, make sure it is operating in positive or negative connection mode. Connect the Green wire to the sensor in the positive case and the Blue wire in the negative case.

Connect the red (positive) and black (negative) wires to the appropriate poles of the vehicle power supply. Wait approx. 1 minute until the appliance is put into operation. You can follow the process on the LED displays.

2.4 Install the application

If you have subscribed to a software service from your device vendor, for an Android phone:

1. Open the Google Play app on your phone.
2. Search for "FlexCom" or "FlexCom tracking".
3. Install the tracking application.

The software can be run in a browser on your iPhone or computer at the following website:

<https://gpspositions.net/map>



ATTENTION!

You need an active internet connection on your phone or computer to use the software!

3. Using the device

An LED informs the user about the operation and status of the device.



LED	Status	
Red (charge indicator)	On	Charging
	Off	Charged
Green (GSM mobile connection indicator)	Flashes quickly	GSM (SMS) mode
	Flashes every 3 seconds	In GPRS (data traffic) mode
	Constantly on	No connection
Kék (GPS műhold kapcsolat jelző)	Flashes quickly	Valid GPS (satellite) connection
	Constantly on	No GPS (satellite) connection

3.1 Settings and information

If you are SUBSCRIBED for the software service provided by your reseller, you may set or obtain additional operating parameters and all tracking information through the appropriate features of the software.

If you have NOT SUBSCRIBED for the software service, you can control the device by sending SMS messages to the phone number of the SIM card in it.



ATTENTION!

If you have subscribed to the software service, DO NOT use SMS-based communication!

The extra costs incurred due to direct SMS messages or the costs of resolving any operational problems they may cause will be reimbursed by the service provider.

3.2 Use your device through an application

Separate software is available for setting or adjusting the operating parameters of the device, for retrieving information or for using more advanced services (eg map route display, waiting and travel points, diagrams, timetable, etc.). This is provided by the distributor in the form of a downloadable application on a desktop computer, tablet browser, android mobile phone as part of a subscription system.


After launching the application in a browser or phone:

1. In the login window, enter the username and password you received from the reseller or registered on its website.
2. Carefully review the information on using the software in the Help.

For a browser, to access Help:



For mobile application:

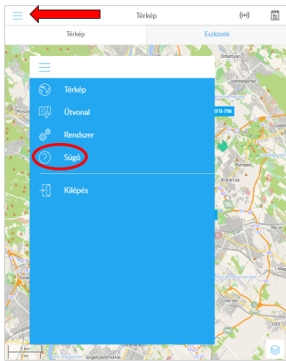

3.3 Using the device with SMS messages

If you do not have a software subscription, you can use the basic functions of the device. You can use SMS messages sent from a mobile phone to the phone number of the device's SIM card to set operating parameters or retrieve position data.

In messages, 123456 is the factory-set password for the device.

The general form of the SMS message:

Message code+password [parameters]

where the parameters are optional depending on the nature of the message.



SMS or voice call communication with your device is charged by your mobile service provider at standard phone rates.

Example: Querying and displaying a device's location on Google Maps

The following command returns a Google Maps link, which when clicked (or tapped) will display the Google Map in the browser, indicating the device.

SMS: G123456#

One possible answer for the device:

Latitude lat:22.65655
Longitude lon:114.18573
Speed Spd:000
Date T:13/10/15 15:55
Battery voltage bat:70%
Device ID ID:8168000010
Google map link <http://maps.google.cn/maps?q=+22.65655,+114.18573>

Example: Speed limit alarm on or off

You can set the device to send an alarm (SMS) when the vehicle speed exceeds a specified limit. The limit must be entered in the form XXX (eg 120 or 070).

Turning on:

SMS message: speed123456 070

Device response: speed ok

Turning off:

SMS message: nospeed123456

Device response: nospeed ok

For details on additional SMS commands, see the detailed user guide:

<https://nyomkovetes.net>

Certifications

This device complies with the essential requirements and other relevant provisions of the Directives 2014/30 / EU EMC, Electromagnetic Compatibility and 014/35 / EU LVD, designed to be used within certain voltage limits.

The product meets the following specifications and standards:

- EN 55024:2010
- EN 55022:2010 (interference tolerance characteristics, limits and measurement methods)
- EN 61000-3-2:2006 + A1:2009 + A2:2009 (emission limits for harmonic currents)
- EN 61000-3-3:2008 (voltage changes, voltage fluctuations and flicker limits)